

KENWOOD[®]
HI/FI STEREO COMPONENTS


SERVICE MANUAL

KA-60

An item of adjustment is written in three languages — English, French and German.


Un article sur réglages est écrit en trois langues, Anglais, Français et Allemand.

Ein Artikel der Abgleich wird auf drei Sprachen, Englische, Französisch und Deutsch geschrieben.

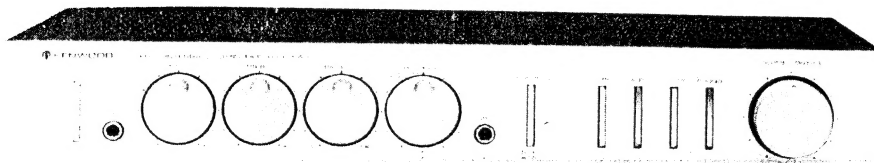



STEREO INTEGRATED AMPLIFIER

INTERNAL VIEW

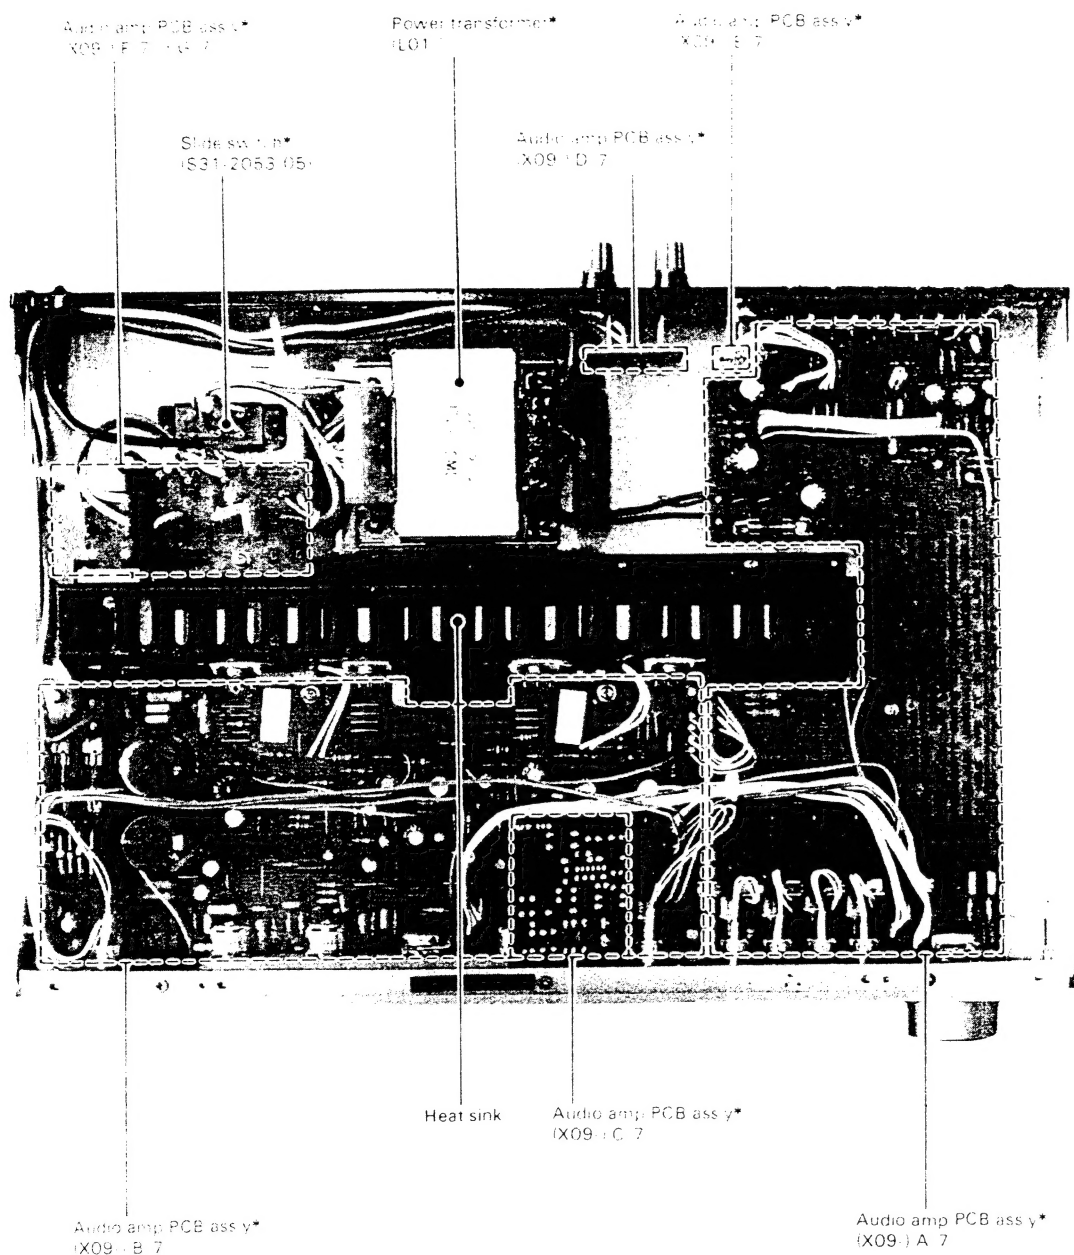

This photo is E type

*Refer to Parts List (P10)

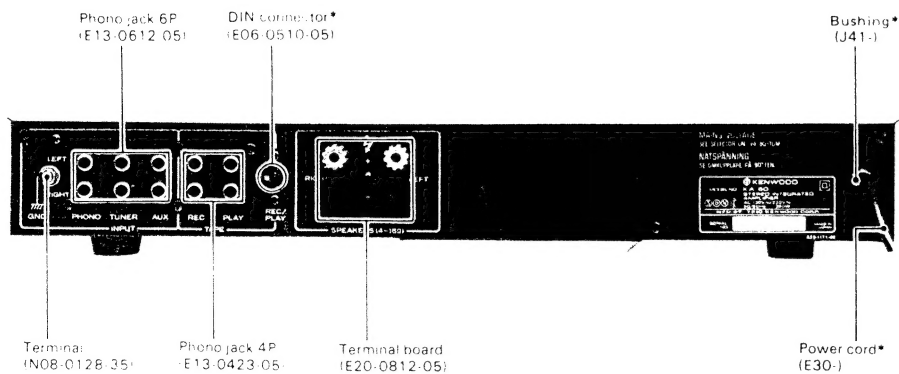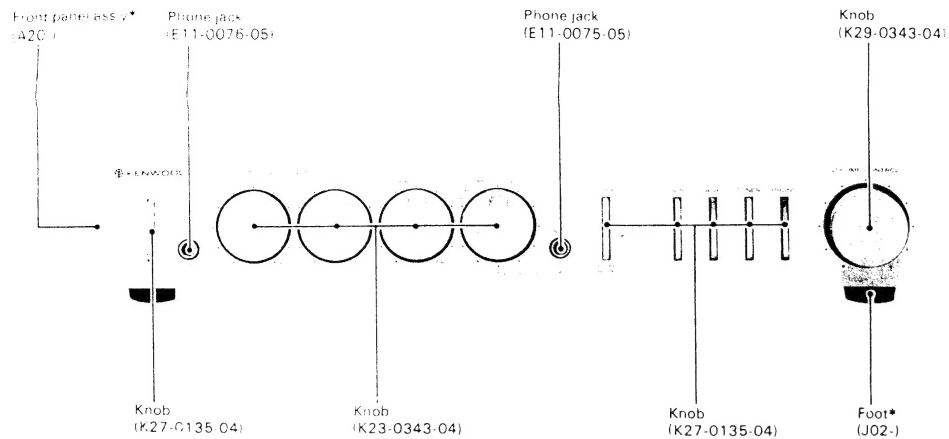


This photo is E type

* Refer to Parts List (P10)

EXPLODED VIEW

ADJUSTMENT/REGLAGES/ABGLEICH

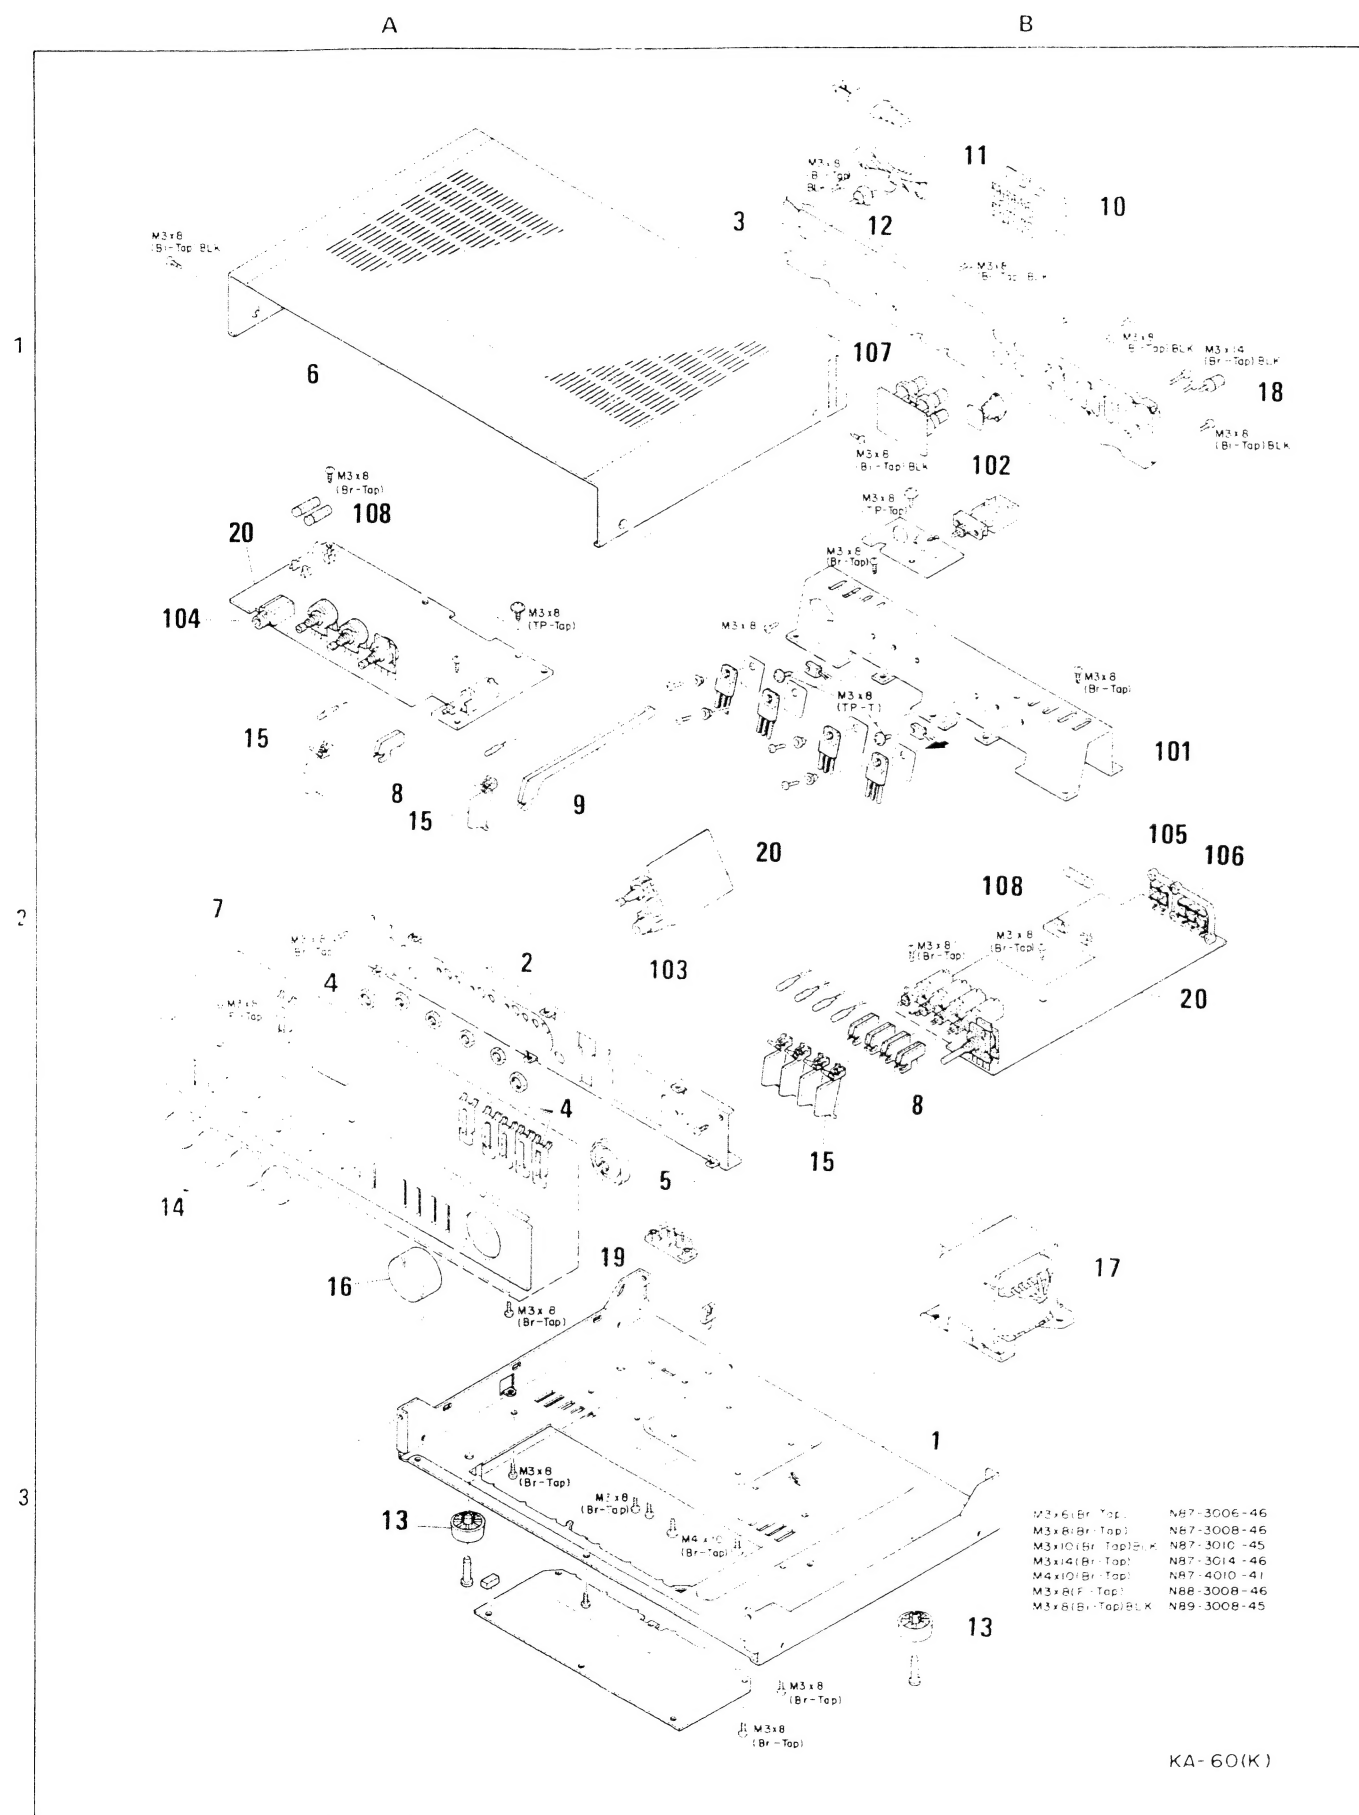

Idle current adjustment (bias current adjustment)

The KA-60 has no adjusting potentiometers. Fixed resistors R51 ~ R54 have been adjusted in the factory to obtain an idle current of 40 ~ 50 mA. Therefore, either R51 or R53 (R52 or R54) may not be inserted.

After replacing the power transistor, perform a check as follows and, if necessary, change the values of R51 and R53 (R52 and R54):

1. Turn the volume control knob fully counter-clockwise. (Set the input level to zero.)
2. Connect a DC voltmeter across R67 (R68) of the power amplifier unit (X09 1460 10B/7) as shown in the figure.
3. Make sure the DC voltmeter reading is within 20 ~ 25 mV.
4. If the reading is out of that range, change the values of R51 and R53 (R52 and R54):
 - When the reading is less than 20 mV, increase resistance.
 - When the reading is more than 25 mV, decrease resistance.

After performing these procedures, the idle current is set to 40 ~ 50 mA.

Réglage courant déwatté (réglage courant de polarisation)

Le modèle KA-60 ne possède pas de potentiomètre de réglage. Les résistances fixes R51 ~ R54 ont été réglées en usine en fonction d'un courant de 40 ~ 50 mA. Par conséquent, soit R51 ou R53 (R52 ou R54) ne peuvent être insérés.

Après avoir effectué le remplacement du transistor d'alimentation, procéder à une vérification conformément aux instructions ci-après et modifier, s'il y a lieu, les valeurs de R51 et R53 (R52 et R54):

1. Tourner à fond le bouton de contrôle du volume dans le sens inverse des aiguilles d'une montre. (Réglage du niveau de sortie sur zéro.)
2. Raccorder un voltmètre CC à R67 (R68) du bloc amplificateur (X09 1460 10B/7), conformément au schéma.
3. S'assurer que la mesure indiquée par le voltmètre est comprise entre 20 et 25 mV.
4. Au cas où elle se situerait hors de ces limites, il conviendrait de modifier les valeurs de R51 et R53 (R52 et R54):
 - Si la mesure est inférieure à 20 mV, augmenter la résistance.
 - Si la mesure est supérieure à 25 mV, diminuer la résistance.

Après avoir terminé ces opérations, régler le courant de watté sur 40 à 50 mA.


Leerlaufstromereinstellung (Vormagnetisierungsstromereinstellung)

Das Modell KA-60 hat kein Einstelpotentiometer. Die Festwiderstände R51 ~ R54 sind im Werk auf eine Blindstromstärke von 40 ~ 50 mA eingestellt worden. Deshalb können entweder R51 oder R53 (R52 oder R54) nicht eingeführt werden.

Nach Auswechseln des Leistungstransistors die Prüfung wie nachstehend beschrieben vornehmen, und die Werte von R51 und R53 (R52 und R54) erforderlichenfalls ändern.


1. Den Lautstärkereger bis zum Anschlag entgegen dem Uhrzeigersinn drehen. (Eingangspegel auf Null einstellen.)
2. Einen Gleichspannungsmesser über R67 (R68) der Endverstärkereinheit (X09 1460 10B/7) gemäß Abbildung anschließen.
3. Sicherstellen, daß der Gleichspannungsmesser 20 ~ 25 mV anzeigt.
4. Bei einer Anzeige außerhalb dieses Bereiches die Werte von R51 und R53 (R52 und R54) ändern:
 - Bei einer Anzeige von weniger als 20 mV den Widerstand erhöhen.
 - Bei einer Anzeige von mehr als 25 mV den Widerstand verringern.

Nach Beendigung dieses Vorganges den Blindstrom auf 40 bis 50 mA einstellen.

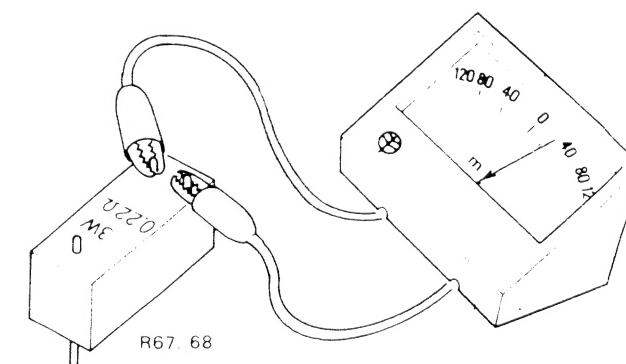

EXPLODED VIEW

ADJUSTMENT/REGLAGES/ABGLEICH

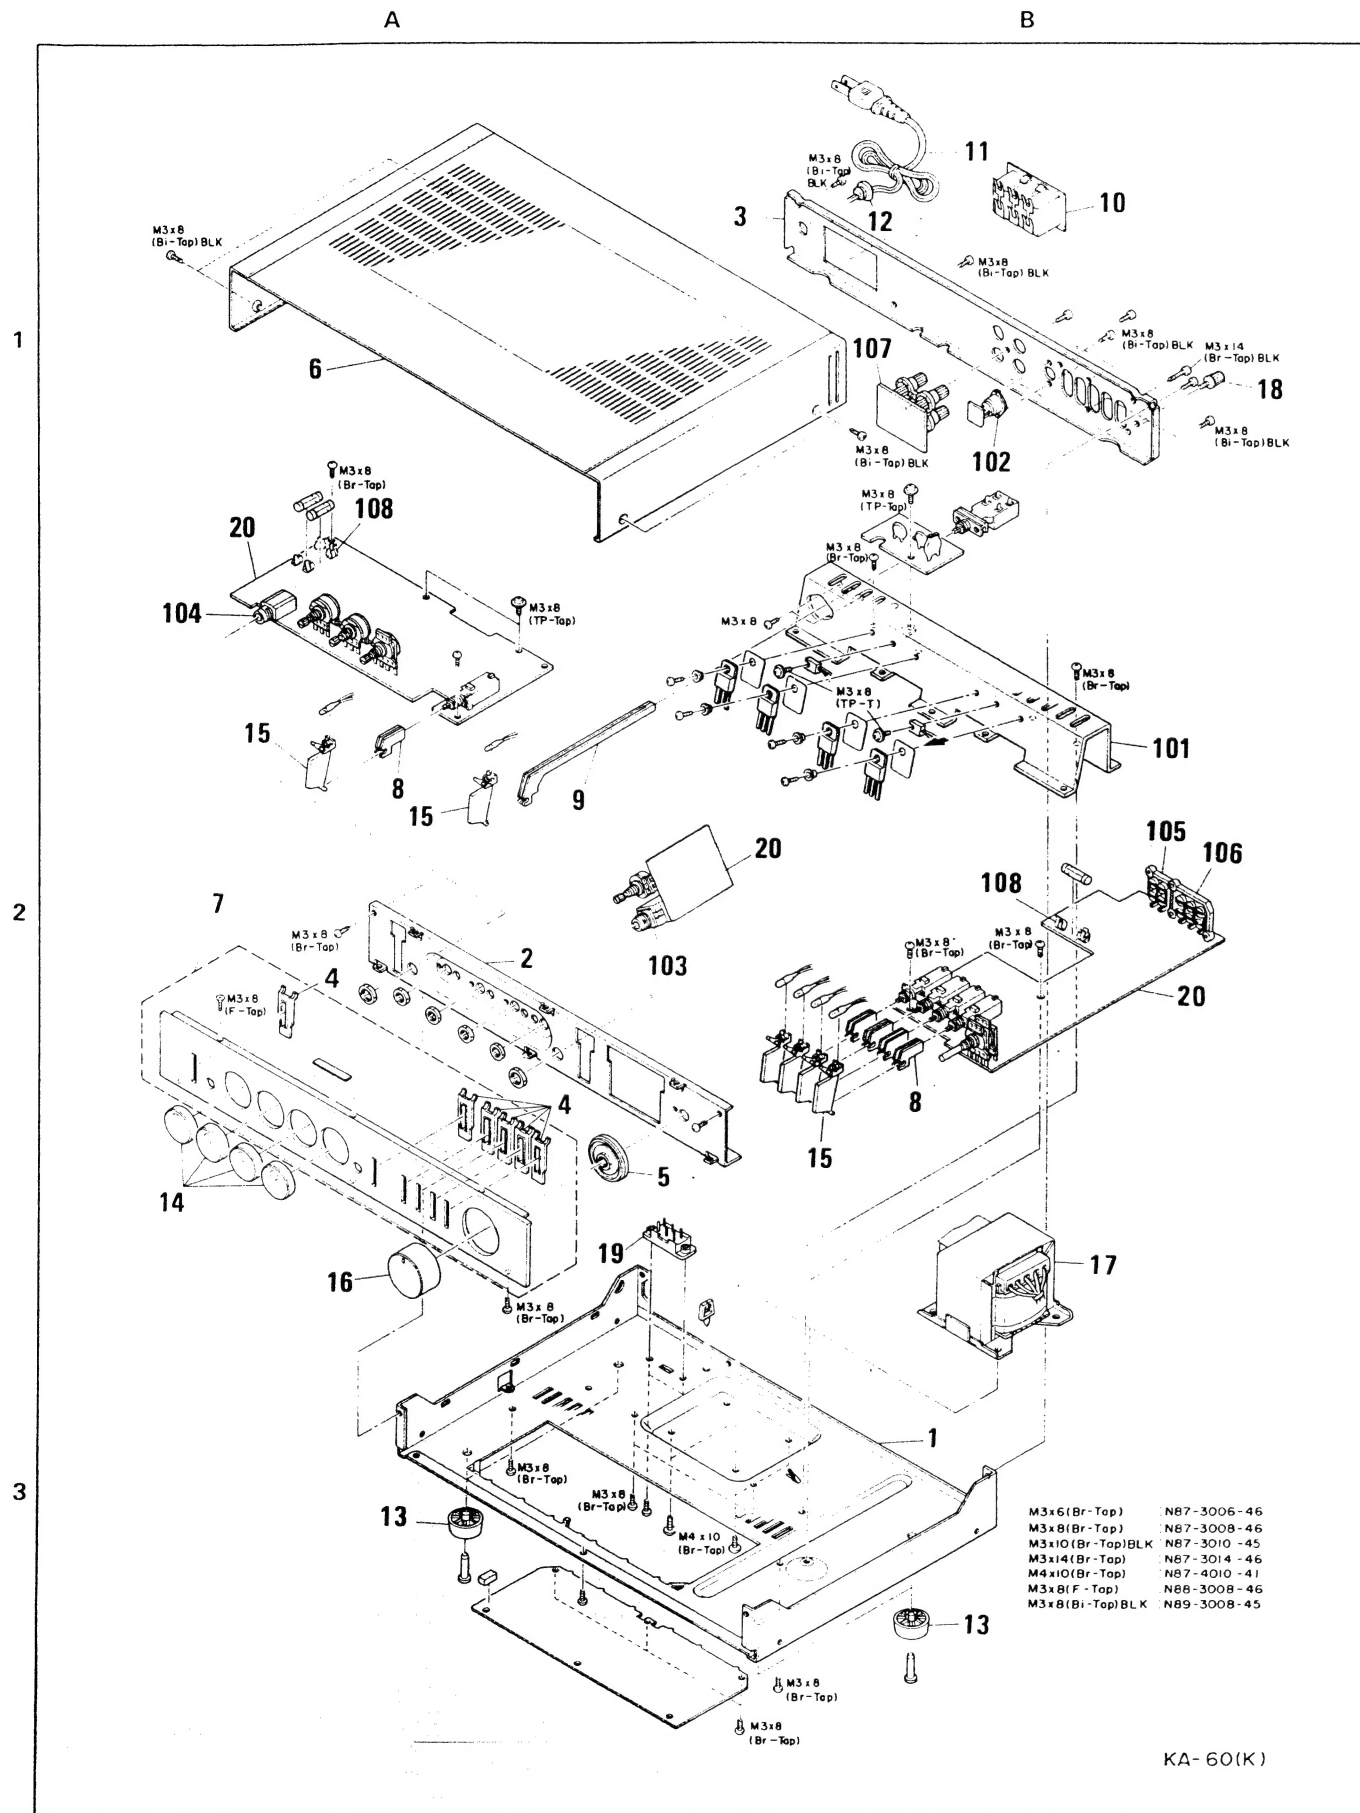

Refer to Parts List on page 10.

Idle current adjustment (bias current adjustment)

The KA-60 has no adjusting potentiometers. Fixed resistors R51 ~ R54 have been adjusted in the factory to obtain an idle current of 40 ~ 50 mA. Therefore, either of R51 or R53 (R52 or R54) may not be inserted.

After replacing the power transistor, perform a check as follows and, if necessary, change the values of R51 and R53 (R52 and R54)

1. Turn the volume control knob fully counterclockwise. (Set the input level to zero)
2. Connect a DC voltmeter across R67 (R68) of the power amplifier unit (X09-1460-10B/7) as shown in the figure.
3. Make sure the DC voltmeter reading is within 20 ~ 25 mV.
4. If the reading is out of that range, change the values of R51 and R53 (R52 and R54).
 - When the reading is less than 20 mV, increase resistance.
 - When the reading is more than 25 mV, decrease resistance.

After performing these procedures, the idle current is set to 40 ~ 50 mA.

Réglage courant déwatté (réglage courant de polarisation)

Le modèle KA-60 ne possède pas de potentiomètre de réglage. Les résistances fixes R51 ~ R54 ont été réglées en usine en fonction d'un courant de 40 ~ 50 mA. Par conséquent, soit R51 ou R53 (R52 ou R54) ne peuvent être insérés.

Après avoir effectué le remplacement du transistor d'alimentation, procéder à une vérification conformément aux instructions ci-après et modifier - s'il y a lieu - les valeurs de R51 et R53 (R52 et R54).

1. Tourner à fond le bouton de contrôle du volume dans le sens inverse des aiguilles d'une montre. (Régler le niveau de sortie sur zéro)
2. Raccorder un voltmètre CC à R67 (R68) du bloc amplificateur (X09-1460-10B/7), conformément au schéma.
3. S'assurer que la mesure indiquée par le voltmètre est comprise entre 20 et 25 mV.
4. Au cas où elle se situerait hors de ces limites, il conviendra de modifier les valeurs de R51 et R53 (R52 et R54)
 - Si la mesure est inférieure à 20 mV, augmenter la résistance.
 - Si la mesure est supérieure à 25 mV; diminuer la résistance.

Après avoir terminé ces opérations, régler le courant dé-
watté sur 40 à 50 mA.


Leerlaufstromeinstellung (Vormagentisierungsstromeinstellung)

Das Modell KA-60 hat kein Einstellpotentiometer. Die Festwiderstände R51 ~ R54 sind im Werk auf eine Blindstromstärke von 40 ~ 50 mA eingestellt worden. Deshalb können entweder R51 oder R53 (R52 oder R54) nicht eingeführt werden.


Nach Auswechseln des Leistungstransistors die Prüfung wie nachstehend beschrieben vornehmen, und die Werte von R51 und R53 (R52 und R54) erforderlichenfalls ändern.

1. Den Lautstärkeregler bis zum Anschlag entgegen dem Uhrzeigersinn drehen.
(Eingangspegel auf Null einstellen.)
2. Einen Gleichspannungsmesser über R67 (R68) der Endverstärkereinheit (X09-1460-10B/7) gemäß Abbildung anschließen.
3. Sicherstellen, daß der Gleichspannungsmesser 20 ~ 25 mV anzeigt.
4. Bei einer Anzeige außerhalb dieses Bereiches die Werte von R51 und R53 (R52 und R54) ändern.
 - Bei einer Anzeige von weniger als 20 mV den Widerstand erhöhen.
 - Bei einer Anzeige von mehr als 25 mV den Widerstand verringern

Nach Beendigung dieses Vorganges, den Blindstrom auf 40 bis 50 mA einstellen

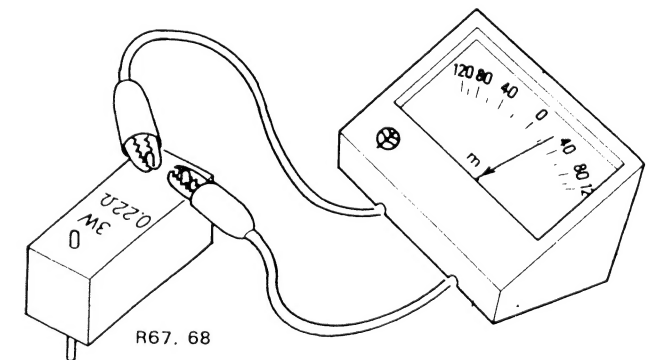

BLACK AND LEVEL DIAGRAM

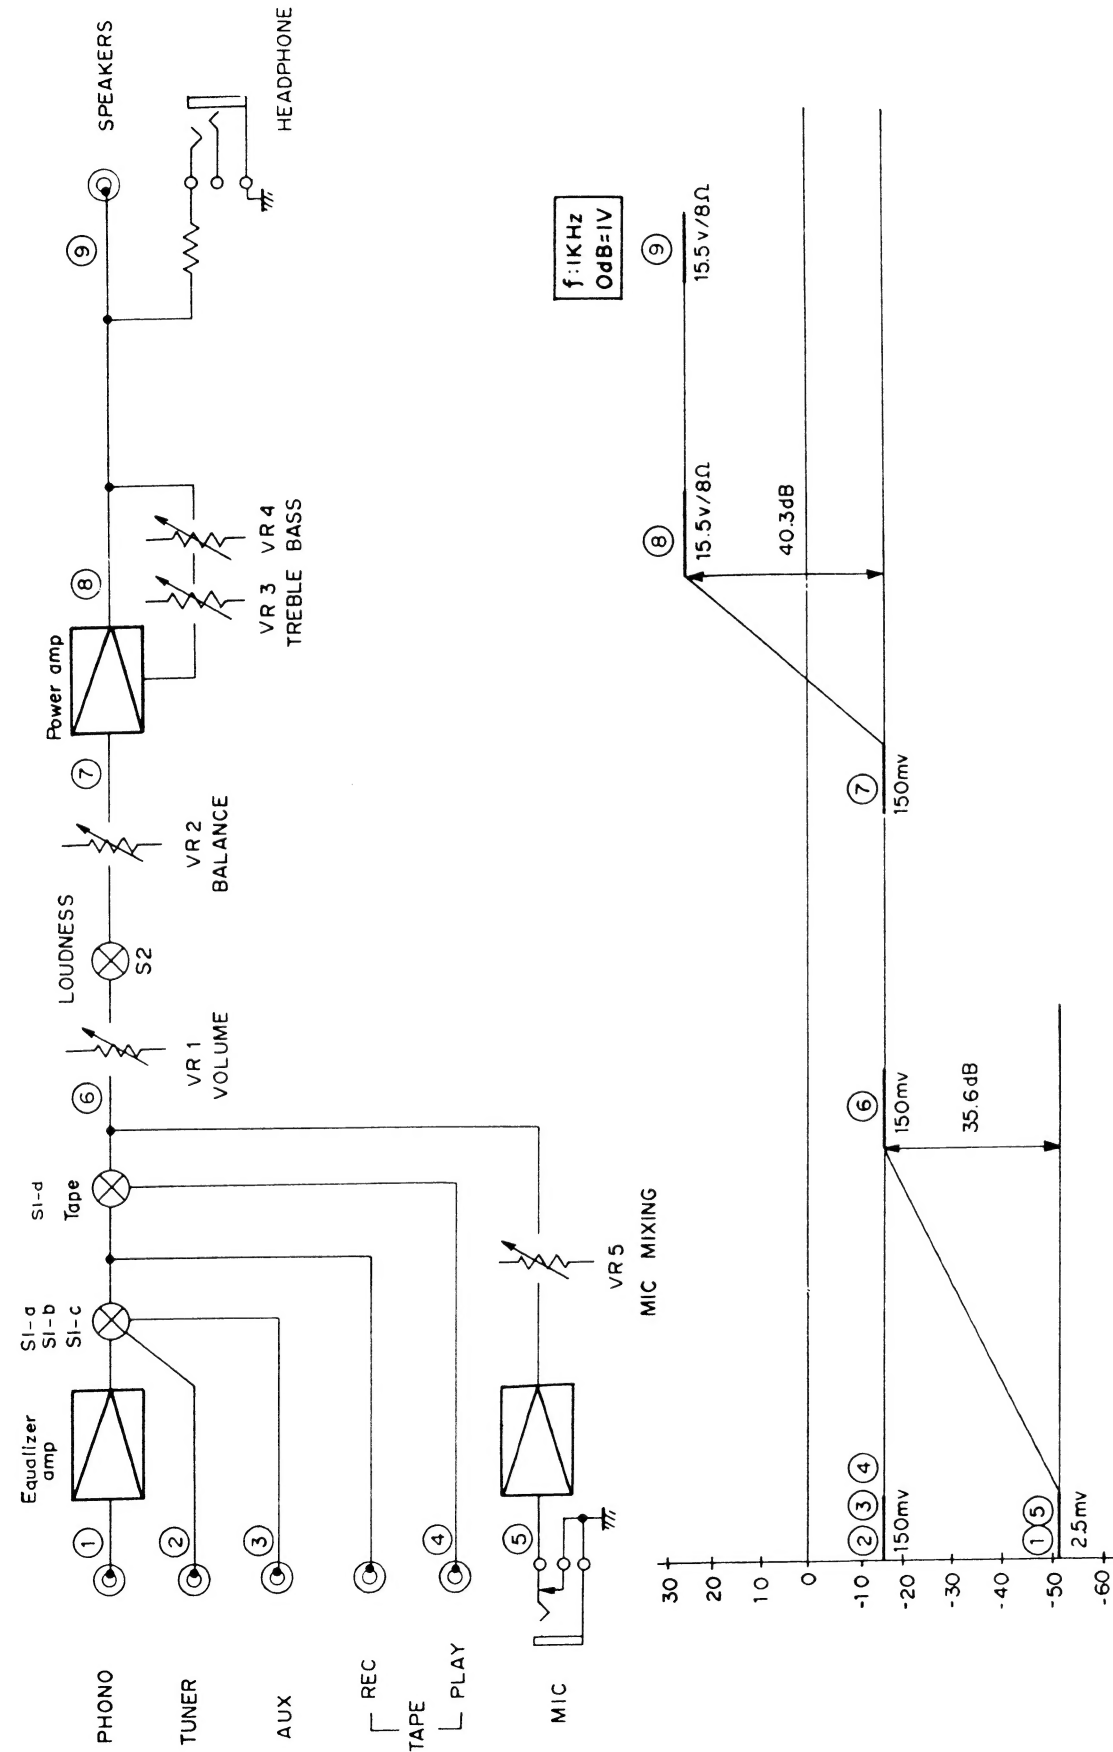

CIRCUIT DESCRIPTION

Shock Noise Protection Circuit Q15 ~ 17

The output circuit of the KA-60 is provided with the circuit consisting of Q15 ~ 17 to prevent shock noise etc. to be emitted from the speaker, instead of a protection relay. Q15 and Q16 is active from the time the power is turned on till the power amplifier stabilizes. On the other hand, Q17 is activated when the power is turned off. To simplify the explanation, the left channel will be described in the following.

1. When POWER is turned ON:

If there is no protection circuit, due to the bootstrap circuit consisting of C39, R55 and R57 and for C29, Q3 is turned on for a short time. As a result, Q1 in the differential amplifier is turned off and the output tends to be negative, after this the balance of the differential amplifier tends to be restored and the potential of the output returns to 0 as shown by the chained line ① in figure 1. Such a rapid and wide variation in potential results in output of shock noise.

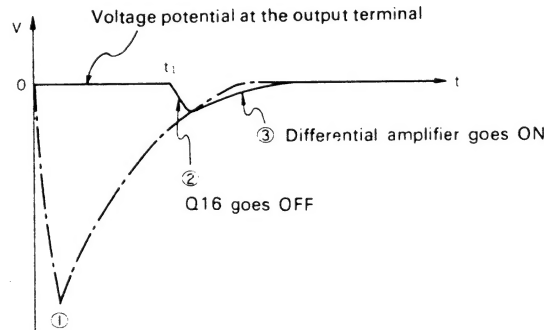


Fig. 1 Output terminal potential change

The basic operation of the shock noise protection circuit is to delay the $-V_B$ voltage in the differential amplifier of the power amplifier against the $+V_B$ voltage. Moreover, control voltage is fed through D9 during this time, to inhibit the operation of the final stage of the power amplifier. The block diagram of the power supply is shown in figure 2.

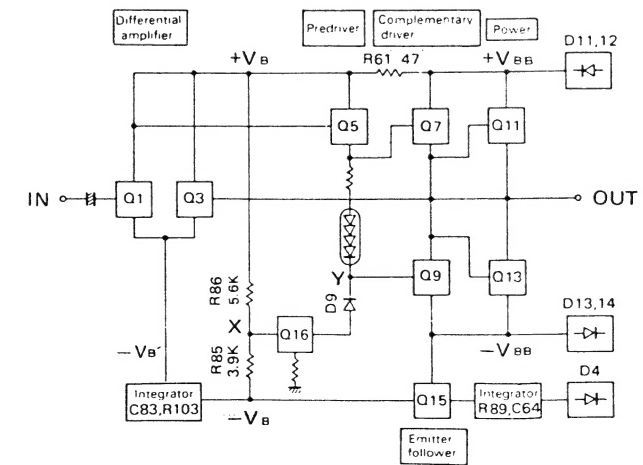


Fig. 2 Block diagram of power supply system

$+V_B$ is obtained from $+V_{BB}$ line via the resistor R61. On the other hand, $-V_B$ is obtained by passing through two integrators after negatively rectified by D4. As integrators work as delay circuits, $-V_B$ supply is delayed against $+V_B$ supply of the differential amplifier circuit. Until $-V_B$ is fully supplied, full current cannot flow through the differential amplifier. In another words, differential amplifier will go on slowly. Emitter follower Q15 operates as impedance converter so that $-V_B$ supply has low output impedance.

Considering the change in potential V_x at point X between R86 and R85, the other side of R86 is connected to $+V_B$ and the other side of R85 is connected to $-V_B$. As shown in figure 3, the drop of $-V_B$ is delayed with respect to the change in $+V_B$ resulting in the potential V_x shown by the chained line. When V_x reaches approximately 0.7V (V_{BE}), the normal bias is applied to Q16 and becomes ON. Current flows through Q16 and D9 immediately after the power is turned on, so that the potential at point Y becomes positive. Because Q9 and D5 are reversely biased and the collector current of Q5 is insufficient, Q7, Q9, Q11 and Q13 stays OFF.

These transistors remain OFF until the potential at point X drops below approximately 0.7V because of the delayed $-V_B$. Then Q16 will be OFF and the stages after the predriver will be ON. As Q16 is not turned off immediately, the delay indicated by ② in figure 1 occurs. Because of the integrator, the differential amplifier is turned on slowly to suppress shock noise as shown by ③ in figure 1.


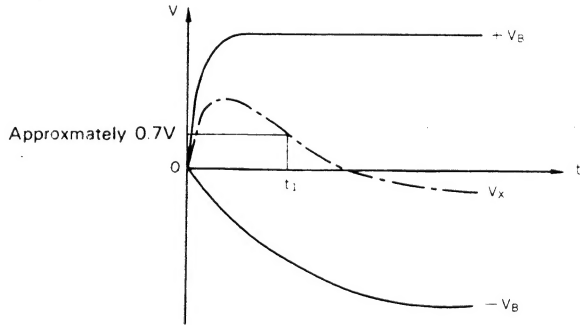


Fig. 3 Potential change of V_x at point X

2. When POWER is turned OFF:

Q17 is provided because the power supply voltage $+B$ to the equalizer amplifier must be dropped rapidly to suppress shock noise. When power is switched off, the charge held by C64 is discharged rapidly through D16, Q15 becomes OFF, the bias potential of Q17 become positive so it will go ON. Because of this, C17 discharges through R33 and the fall of $+B$ will be sharp.

AUDIO AMP (X09-146*-.**)

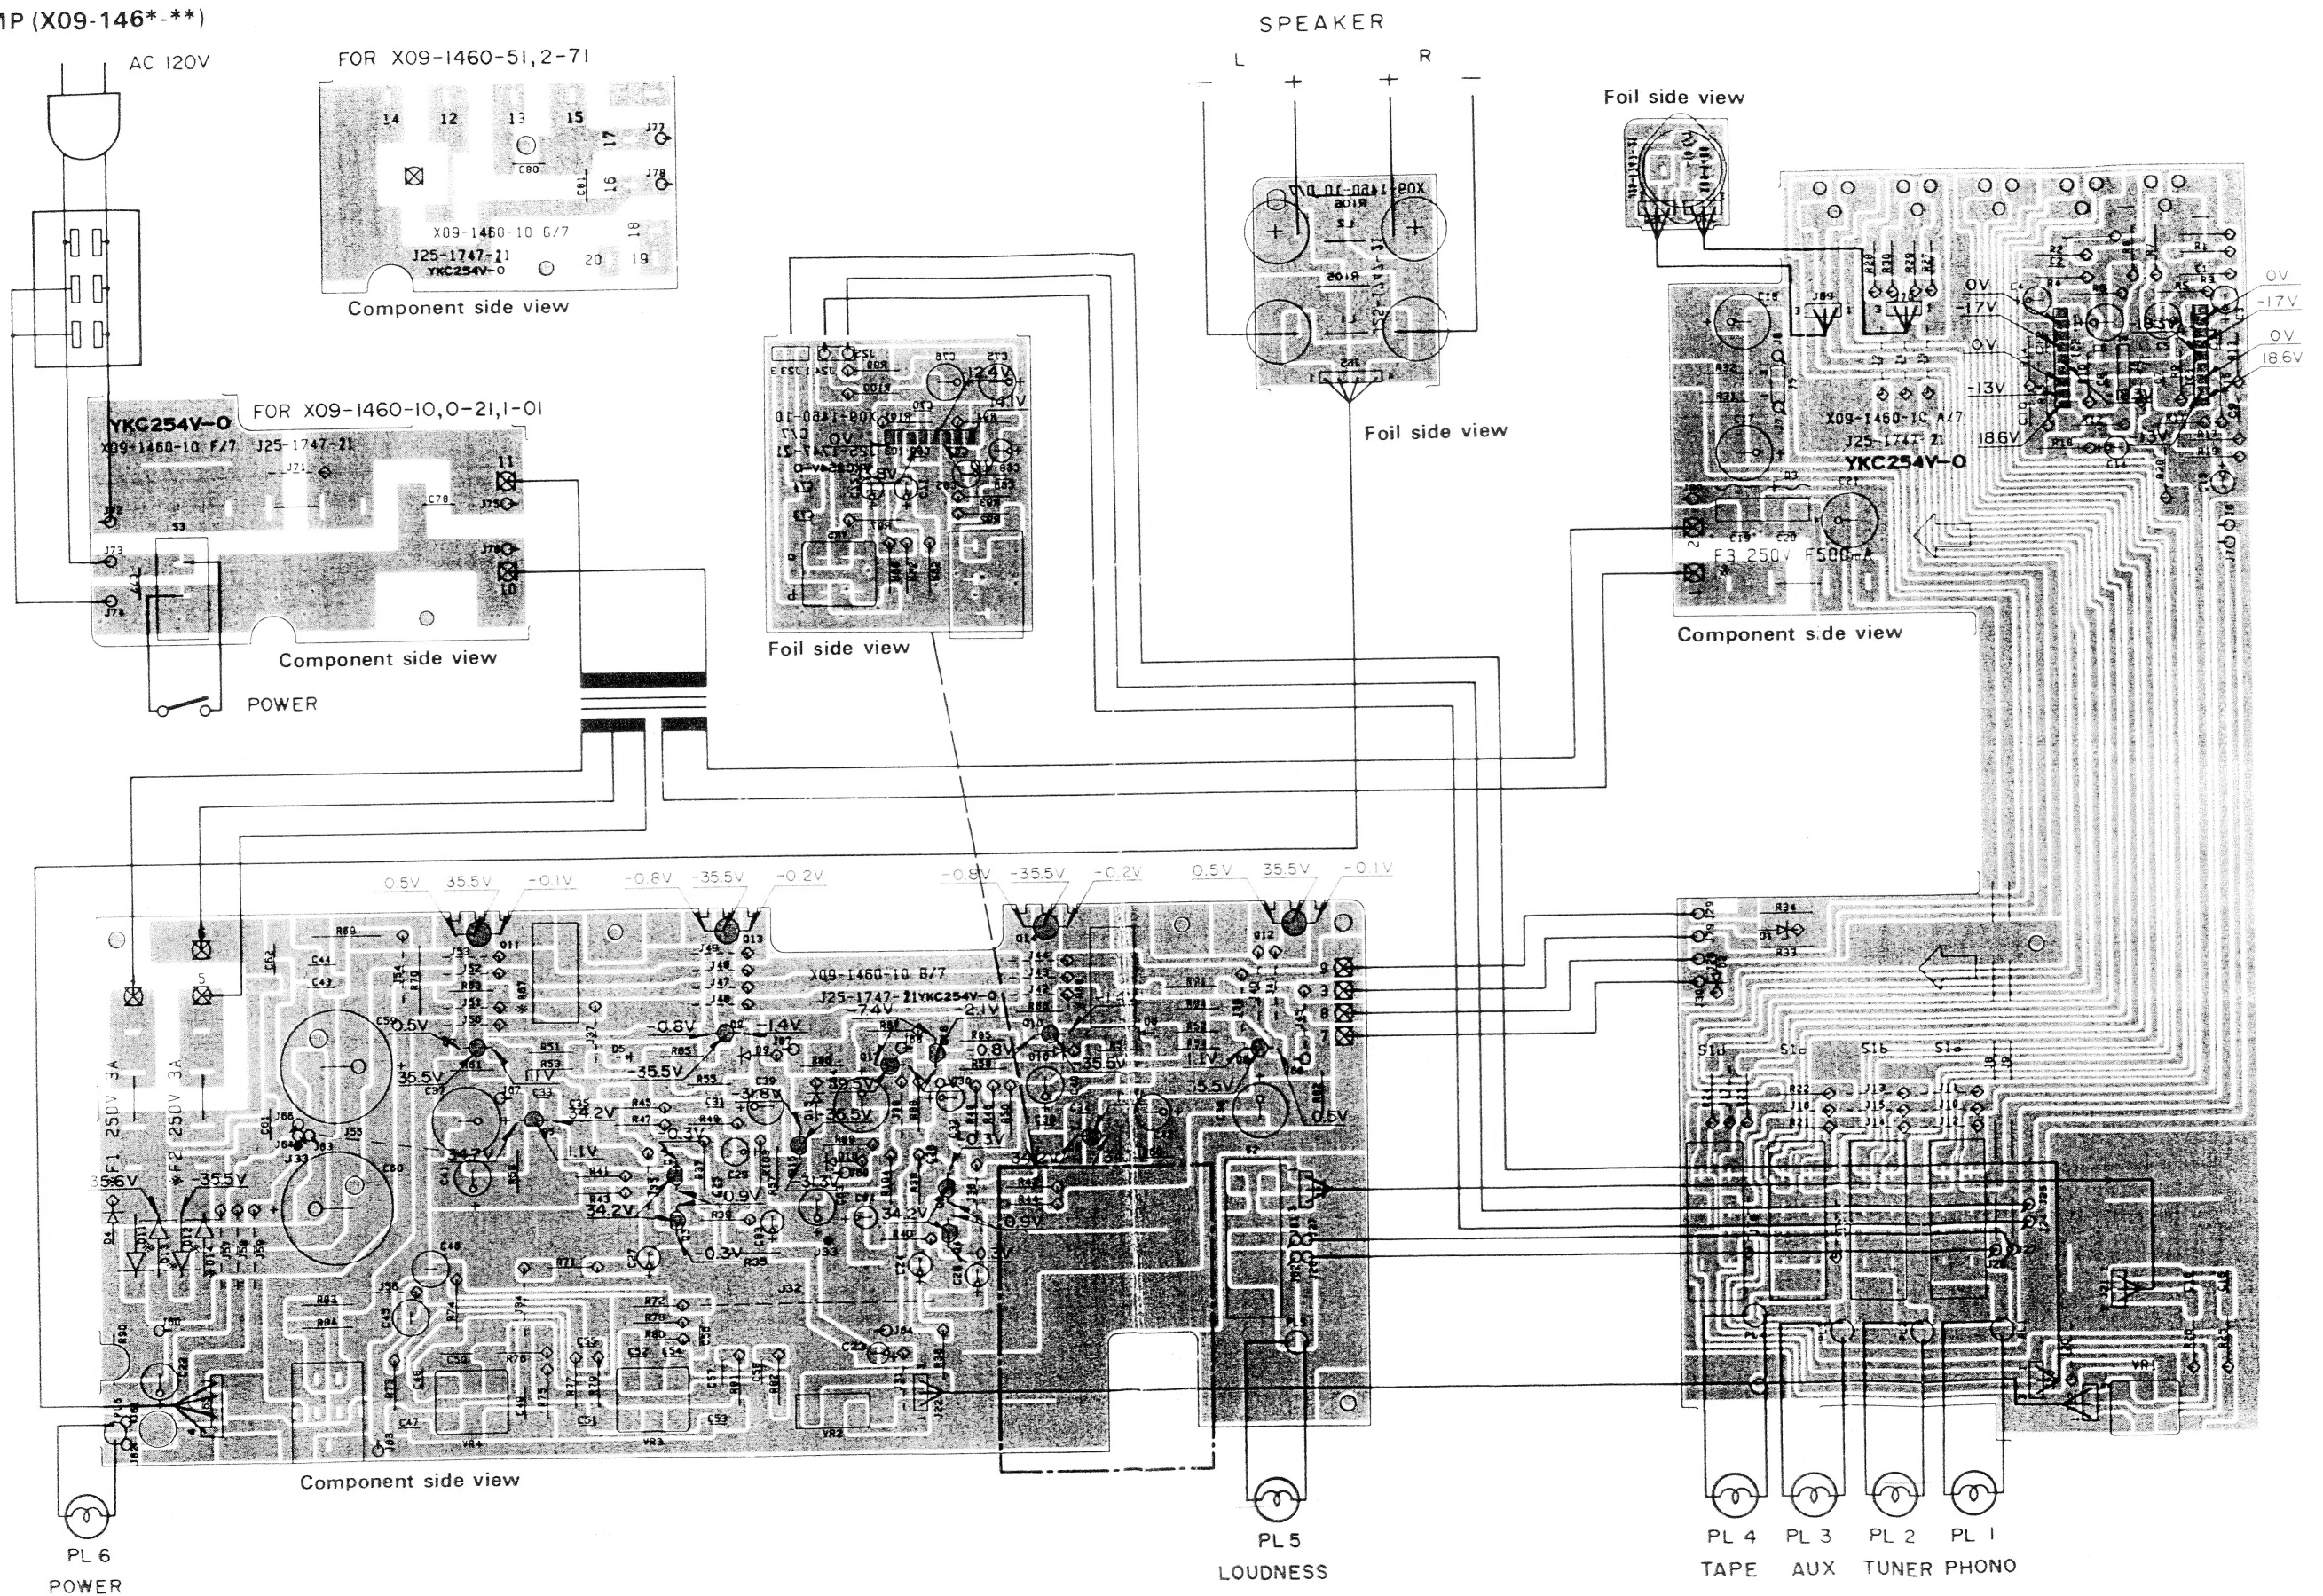

Refer to the schematic diagram for the values of resistors and capacitors.


2SA954
2SA992
2SC945
2SC1980

2SA850
2SC1735

2SB686
2SD716

TA7322P

HA1457W-04

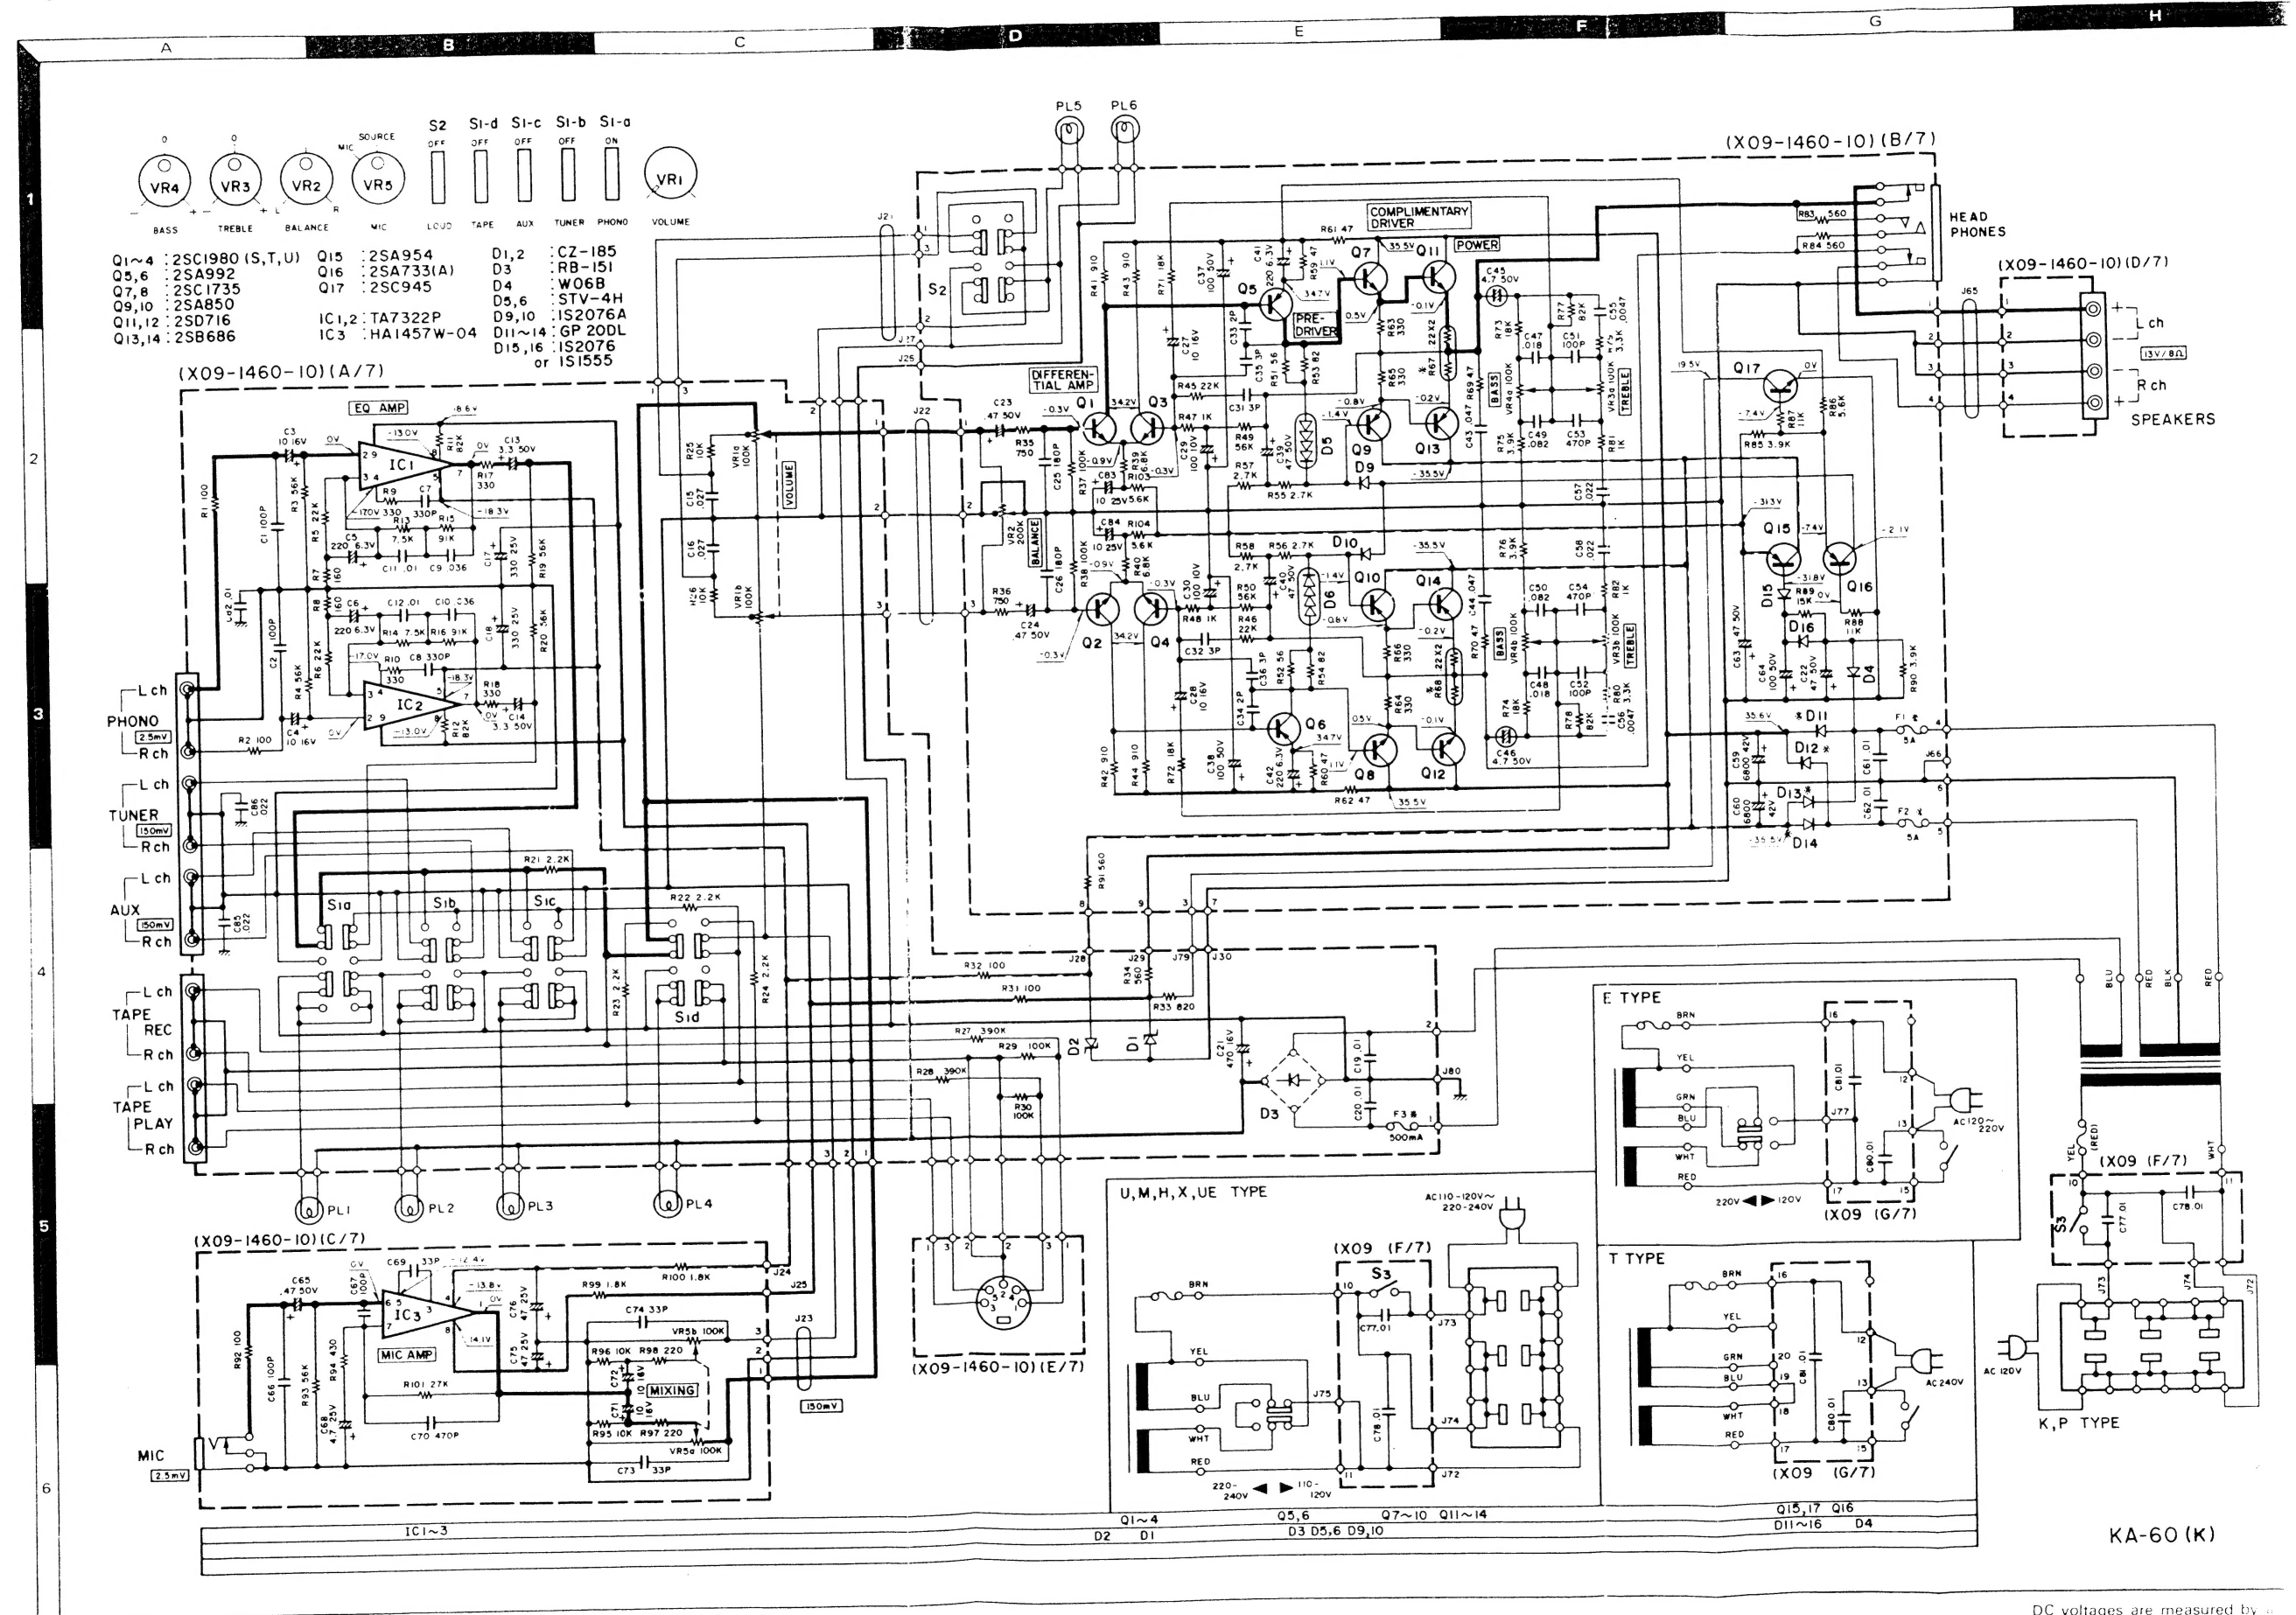



SPECIFICATIONS

Power output

30 watts* per channel minimum RMS, both channels driven, at 8 ohms from 20 Hz to 20,000 Hz with no more than 0.08% total harmonic distortion.

Both Channels Driven	32-32 watts @ 8 ohms at 1,000 Hz 32-32 watts @ 4 ohms at 1,000 Hz
Total Harmonic Distortion (20 Hz to 20,000 Hz)	
AUX input to SPEAKER output	0.08% at rated power into 8 ohms 0.04% at 1/2 rated power into 8 ohms
PHONO input to SPEAKER output	0.08% at rated power with VOLUME = 20 dB 0.08% at rated power into 8 ohms
Intermodulation Distortion (60 Hz, 7 kHz x 1)	
Distorting Factor	20 Hz to 20,000 Hz into 8 ohms
Power Bandwidth	10 Hz to 40,000 Hz @ 0.08% THD
Frequency Response	10 Hz to 100 kHz @ -3 dB
Speaker Impedance	Accept 4 ohms to 16 ohms
Input Sensitivity-Impedance	
Phono MC	2.5 mV/50 Ω ohms
Tuner: AUX, Tape	150 mV/30 Ω ohms
Signal to Noise Ratio (HF A)	
Phono	86 dB for 2.5 mV input 88 dB for 5.0 mV input
Tuner: AUX, Tape	92 dB for 10 mV input 100 dB for 150 mV input
MC	73 dB for 2.5 mV input
Output Level-Impedance	180 mV (RMS) 1 Ω to 0.08% at 1,000 Hz
Tape REC (Pin)	
(DIN)	
Phono Frequency Response	150 mV/330 Ω ohms 30 mV/75 Ω ohms
Tone Control	
Bass	+17 dB at 100 Hz
Treble	+10 dB at 15 kHz
Lead-in Control	+9 dB at 100 Hz to -30 dB VCLT (Pin)
GENERAL	
Requirements	60 Hz 120 V AC & Canada Model no. 50 115 V, 120 V, 220 V AC, variable 2 A fuse and USA
Power Consumption	90 W (IEC) 26 W (No signal) Switched 2 (unswitched 1) W 440 mW (17.7 V 32 @ 78 mm (3.12 @ 338 mm (13.32 @ 5.5 (12.1) lbs)
A C Outlets	
Dimensions	
Weight	

Kerwood follows a policy of continuous advancements in development. For this reason specifications may be changed without notice.

Kenwood strebt ständige Verbesserungen in der Entwicklung an. Daher bleiben Änderungen der technischen Daten jederzeit vorbehalten.

Kenwood poursuit une politique de progrès constants en ce qui concerne le développement. Pour cette raison les spécifications sont sujettes à modifications sans préavis.

INSTRUCTION FOR PARTS LIST

Ref. No.	Parts No	Description	Re- marks	
参照番号	部品番号	部品名 / 規格	備考	
②				
①	1A 1A	※03-0008-12	METALIC CABINET	3
	19 2A	※2C-1070-11	FRONT PANEL ASSY	4
	19 2A	※2C-1070-11	FRONT PANEL ASSY	5
	19 2A	※2C-1070-11	FRONT PANEL ASSY	5U
	19 2A	※2C-1070-11	FRONT PANEL ASSY	5W
	※221	※43-1333-05	FL-PROOF R0350 J 2W	6
	※222	※43-1368-15	FL-PROOF R0680 J 2W	
	※01 2	※12-3301-05	TRIMMING POT, 20K(8)	
	※43 4	※42-3305-05	POTENTIOMETER	
	※45 0	※12-3302-05	TRIMMING POT, 5K(8)	

- 1 Exploded view drawing No
- 2 Position in exploded view
- 3 Symbol of main parts
- 4 Area to which parts are shipped. Example: A20-1390-13 is the part No. of FRONT PANEL ASSY for the "K" type products (for U.S.A.). When this column is blank it means that the same type of parts (same parts No.) are used for the products shipped to all areas.
- 5 Reference No. in schematic diagram
- 6 Abbreviation of ceramic capacitor
- 7 All capacitors and resistors are listed using abbreviations. Abbreviations:
 - * Abbreviations of capacitors (Parts No. with initial letter "C")
 - ELECTRO** Electrolytic capacitor
 - LL-ELEC** Low leak electrolytic capacitor
 - NP-ELEC** Non polar electrolytic capacitor
 - MICA** Mica capacitor
 - POLYSTY** Polystyrene capacitor
 - MYLAR** Mylar capacitor
 - CERAMIC** Ceramic capacitor
 - TANTAL** Tantalum capacitor
 - MF** Microfarads type capacitor
 - MP** Metalized paper capacitor
 - OIL** Oil capacitor

- | | |
|-------------|---------------------------------------|
| RC | Carbon composition resistor |
| RD | Carbon film resistor |
| FL-PROOF RD | Flame proof carbon film resistor |
| RW | Wire wound power resistor |
| FL-PROOF RS | Flame proof metal oxide film resistor |
| RN | Metal film resistor |
| FUSE-RESIST | Resistor with fuse function |
| 2B | Rated wattage 1/8W |
| 2E | Rated wattage 1/4W |
| 2H | Rated wattage 1/2W |
| 3A | Rated wattage 1W |
| 3D | Rated wattage 2W |
| 3F | Rated wattage 3W |
| 3G | Rated wattage 4W |
| 3H | Rated wattage 5W |

All resistor values are indicated with the unit (Ω) omitted.

- * Abbreviations common to capacitors and resistors
- C $\pm 0.25\text{pf}$ (Used for capacitors only)
- D $\pm 0.5\text{pf}$ (Used for capacitors only)
- F $\pm 1\%$
- G $\pm 2\%$
- J $\pm 5\%$
- K $\pm 10\%$
- M $\pm 20\%$
- Z $\pm 80\% - 20\%$ (Used for capacitors only)
- P $\pm 100\% = 0\%$ (Used for capacitors only)

Resistors RD (carbon composition resistors) are not listed in the parts list. For values, refer to the schematic diagram.

CODE's in X09-146*-**

- K : X09-1460-10
P : X09-1461-01
M : X09-1460-21
T : X09-1460-51
E : X09-1462-71

PARTS LIST

Ref. No.	Parts No.	Description	Remarks
参照番号	部品番号	部品名 / 規格	備考
KA-60 (UNIT)			
1 3B	-	MAIN CHASSIS	
2 2A	-	SUB PANEL	
3 1B	-	REAR PANEL	
4 2A	-	ESCUTCHEON (POWER SEL.)	
5 2A	-	ESCUTCHEON (VOLUME)	
6 1A	A01-0376-03	METALLIC CABINET	*
7 2A	A20-1620-02	FRONT PANEL ASS'Y	*
7 2A	A20-1621-02	FRONT PANEL ASS'Y	*
-	B46-0055-20	WARRANTY CARD	P
-	B46-0060-00	WARRANTY CARD	T
-	B46-0061-20	WARRANTY CARD	K
-	B46-0062-20	WARRANTY CARD	UH
-	B46-0062-20	WARRANTY CARD	UE
-	B46-0063-13	WARRANTY CARD	UH
-	B46-0063-13	WARRANTY CARD	UE
-	B46-0064-10	WARRANTY CARD	X
-	B50-3129-00	INSTRUCTION MANUAL	U
-	B50-3129-00	INSTRUCTION MANUAL	UE
-	B50-3129-00	INSTRUCTION MANUAL	H
-	B50-3130-00	INSTRUCTION MANUAL	+P
-	B50-3131-00	INSTRUCTION MANUAL	+X
-	B50-3132-00	INSTRUCTION MANUAL	+E
-	B50-3222-00	INSTRUCTION MANUAL	+X
-	B59-0018-00	SERVICE STATIONS' LIST	U
-	B59-0018-00	SERVICE STATIONS' LIST	UE
8 2A, 2B	D21-0460-04	EXTENSION SHAFT(A) X5	
9 2A	D21-0461-04	EXTENSION SHAFT(B)	*
10 1E	E03-0007-05	AC OUTLET	K, L
10 1B	E03-0007-05	AC OUTLET	U
10 1E	E03-0007-05	AC OUTLET	UE
10 1B	E03-0007-05	AC OUTLET	U
10 1B	E03-0009-05	AC OUTLET	UE
11 1B	E30-0181-05	POWER CORD	X, E
11 1B	E30-0185-05	POWER CORD	X
11 1B	E30-0459-05	POWER CORD	E
11 1B	E30-0515-05	POWER CORD	U, H
11 1B	E30-0515-05	POWER CORD	UE
11 1B	E30-0515-05	POWER CORD	T
-	H01-3139-04	CARTON BOX	U
-	H01-3139-04	CARTON BOX	UH
-	H01-3139-04	CARTON BOX	UE
-	H01-3139-04	CARTON BOX	U
-	H01-3142-04	CARTON BOX	UE
-	H10-1538-03	POLYSTYRENE FIXTURE	
-	H25-0076-04	BAG (530x450)	
-	H25-0179-04	BAG	
-	J19-0515-05	PE BOARD SUPPORT	
12 1E	J41-0024-15	BUSHING (POWER CORD)	U
12 1B	J41-0033-05	BUSHING (POWER CORD)	UH
12 1B	J41-0033-05	BUSHING (POWER CORD)	UE
12 1B	J41-0033-05	BUSHING (POWER CORD)	U
12 1E	J41-0033-05	BUSHING (POWER CORD)	UE
12 1B	J41-0033-05	BUSHING (POWER CORD)	U
12 1B	J41-0034-05	BUSHING (POWER CORD)	UE
13 3A, 3B	J02-0088-05	FOOT X4	X, E
13 3A, 3B	J02-0089-05	FOOT X4	U
13 3A, 3B	J02-0089-05	FOOT X4	UE

Ref. No. 参照番号	Parts No. 部品番号	Description 部品名 / 規格	Remarks 備考
13 3A,31	J02-0089-05	FOCT X4	*T
13 3A,31	J02-0089-05	FOCT X4	*U
13 3A,31	J02-0089-05	FOCT X4	*UL
14 2A	K23-0343-04	KN0B (BASS,TREBLE)	*.
14 2A	K23-0343-04	KN0B (BALANCE,MIC)	*.
15 2A,2F	K27-0135-04	KN0B (SELECTOR,POWER)	*.
16 3A	K29-0343-04	KN0B (VOLUME)	*.
17 3B	L01-2031-05	POWER TRANSFORMER	*K
17 3B	L01-2035-05	POWER TRANSFORMER	*U
17 3B	L01-2035-05	POWER TRANSFORMER	*H
17 3B	L01-2035-05	POWER TRANSFORMER	*X
17 3B	L01-2035-05	POWER TRANSFORMER	*UE
17 3B	L01-2036-05	POWER TRANSFORMER	*T
17 3B	L01-2036-05	POWER TRANSFORMER	*P
17 3B	L01-2037-05	POWER TRANSFORMER	*P
-	N09-0303-05	SCREW (DIN CONNECTOR)	
18 1B	N08-0128-35	TERMINAL (GND)	
19 3A	S31-2053-05	SLIDE SWITCH (VOLTAGE)	*K
19 3A	S31-2053-05	SLIDE SWITCH (VOLTAGE)	*U
19 3A	S31-2053-05	SLIDE SWITCH (VOLTAGE)	*H
19 3A	S31-2053-05	SLIDE SWITCH (VOLTAGE)	*X
19 3A	S31-2053-05	SLIDE SWITCH (VOLTAGE)	*UE
20 1A,2F	X09-1460-10	AUDIO AMP PCB ASS'Y	*K
20 1A,2E	X09-1460-21	AUDIO AMP PCB ASS'Y	*U
20 1A,2E	X09-1460-21	AUDIO AMP PCB ASS'Y	*H
20 1A,2E	X09-1460-21	AUDIO AMP PCB ASS'Y	*X
20 1A,2E	X09-1460-21	AUDIO AMP PCB ASS'Y	*UE
20 1A,2E	X09-1460-51	AUDIO AMP PCB ASS'Y	*T
20 1A,2E	X09-1461-01	AUDIO AMP PCB ASS'Y	*P
20 1A,2H	X09-1462-71	AUDIO AMP PCB ASS'Y	*E
AUDIO AMP (X09-146*-**)			
101 1B,2B	-	HEAT SINK	
PL1 -4	B30-0226-05	LAMP	*.
PL5 -6	B30-0227-05	LAMP	*.
C1 -2	C71-1710-15	CERAMIC 100PF J	
C3 -4	C25-1210-67	LL-ELEC 100F 16WV	
C5 -6	C24-0822-71	ELECTRO 220UF 6.3WV	
C7 -8	C52-1733-16	CERAMIC 330PF K	
C9 -10	C46-1731-35	MYLAR 0.036UF J	
C11 -12	C46-1710-35	MYLAR 0.01UF J	
C13 -14	C24-1733-51	ELECTRO 3.3UF 50WV	
C15 -16	C46-1727-35	MYLAR 0.027UF J	
C17 -18	C24-1433-71	ELECTRO 330UF 25WV	
C19 -20	C53-1710-37	CERAMIC 0.01UF M	
C21	C24-1247-71	ELECTRO 470UF 16WV	
C22	C24-1747-61	ELECTRO 47UF 50WV	
C23 -24	C25-1747-47	LL-ELEC 0.47UF 50WV	
C25 -26	C71-1718-16	CERAMIC 180PF K	
C27 -28	C24-1210-61	ELECTRU 100F 16WV	
C29 -30	C24-1010-71	ELECTRO 100UF 10WV	
C31 -32	C71-1703-01	CERAMIC 3PF C	
C33 -34	C71-1703-01	CERAMIC 2PF C	
C35 -36	C71-1703-01	CERAMIC 3PF C	
C37 -38	C24-1710-71	ELECTRO 100UF 50WV	
C39 -40	C24-1747-61	ELECTRO 47UF 50WV	
C41 -42	C24-0822-71	ELECTRO 220UF 6.3WV	
C43 -44	C46-1747-35	MYLAR 0.047UF J	
C45 -46	C26-1747-57	NP-ELEC 4.7UF 50WV	
C47 -48	C46-1718-35	MYLAR 0.018UF J	
C49 -50	C46-1782-35	MYLAR 0.082UF J	

PARTS LIST

Ref. No. 参照番号	Parts No. 部品番号	Description 部品名 / 規格	Re- marks 備考
C51 ,52 C53 ,54 C55 ,56 C57 ,58 C59 ,60	C71-1710-15 C52-1747-16 C46-1747-25 C46-1722-35 C90-0468-05	CERAMIC 100PF J CERAMIC 470PF K MYLAR 0.0047UF J MYLAR 0.022UF J ELECTRO 6800UF 42WV	
C61 ,62 C63 C64 C65 C66 ,67	C54-2710-39 C24-1747-61 C24-1710-71 C25-1747-47 C71-1710-15	CERAMIC 0.01UF P ELECTRO 47UF 50WV ELECTRO 100UF 50WV LL-ELEC 0.47UF 50WV CERAMIC 100PF J	
C68 C69 C70 C71 ,72 C73 ,74	C24-1447-51 C71-1733-06 C52-1747-16 C24-1210-61 C71-1733-06	ELECTRO 4.7UF 25WV CERAMIC 33PF K CERAMIC 470PF K ELECTRO 10UF 16WV CERAMIC 33PF K	
C75 ,76 C77 ,78 C77 ,78 C80 ,81 C82	C24-1447-61 C91-0023-05 C91-0079-05 C91-0079-05 C53-1710-37	ELECTRO 47UF 25WV CERAMIC 0.01UF AC250V CERAMIC 0.01UF AC125V CERAMIC 0.01UF AC125V CERAMIC 0.01UF M	M KP TE
C83 ,84 C85 ,86	C24-1410-61 C55-1722-38	ELECTRO 10UF 25WV CERAMIC 0.022UF Z	
102 1B 103 2A 104 1A 105 2B 106 2B	E06-0510-05 E11-0075-05 E11-0076-05 E13-0423-05 E13-0612-05	DIN CONNECTOR PHONE JACK (MICROPHONE) PHONE JACK (HEADPHONE) PHONO JACK 4P PHONO JACK 6P	
107 1L	E20-0E12-05	SPEAKER TERMINAL BOARD	
F1 ,2 F1 ,2 F1 ,2 F3	F05-4022-05 F05-4024-05 F05-5021-05 F05-5015-05	FUSE 4A FUSE 4A FUSE 5A FUSE 0.5A	P TE XP E
102 1A,2B 108 1A,2F 102 1A,2B	J13-0055-05 J13-0055-05 J13-0055-05	FUSE HOLDER X4 FUSE HOLDER X4 FUSE HOLDER X6	KP TF E
-	N09-0314-05	SCREW	
R31 ,32 R33 R34 R51 ,52 R51 ,52	R43-1210-15 R47-5482-15 R47-5456-15 R43-1256-05 R43-1262-05	FL-PROOF RD100 J 2E FL-PROOF RS820 J 3A FL-PROOF RS560 J 3A FL-PROOF RD56 J 2E FL-PROOF RD62 J 2E	M KP
R51 ,52 R53 ,54 R55 -58 R59 -62 R63 -66	R43-1262-05 R43-1282-05 R43-1227-25 R43-1247-05 R43-1233-15	FL-PROOF RD62 J 2E FL-PROOF RD82 J 2E FL-PROOF RD2.7K J 2E FL-PROOF RD47 J 2E FL-PROOF RD330 J 2E	TE
R67 ,68 R67 ,68 R67 ,68 R69 ,70 R63 ,64	R90-0128-05 R90-0138-05 R90-0138-05 R47-5547-95 R47-5456-15	MULTIPLE COMPONENTS MULTIPLE COMPONENTS MULTIPLE COMPONENTS FL-PROOF RS4.7 J 3D FL-PROOF RS560 J 3A	M X1 EP
R65 R66 R90 R91 VR1	R40-R339-26 R40-R356-26 R47-5439-25 R47-5456-15 R06-5053-05	RC 3.9K K 2H RC 5.6K K 2H FL-PROOF RS3.9K J 3A FL-PROOF RS560 J 3A POTENTIOMETER	
VR2 VR3 ,4 VK5	R01-5029-05 R06-5052-05 R06-5051-05	POTENTIOMETER POTENTIOMETER POTENTIOMETER	*

Ref. No. 参照番号	Parts No. 部品番号	Description 部品名 / 規格	Re- marks 備考
S1 S2 S3 S3 S3	S42-4013-05 S40-4031-05 S40-1020-05 S40-1021-05 S40-1030-05	PUSH SWITCH (SELECTOR) PUSH SWITCH (LOUDNESS) PUSH SWITCH (POWER) PUSH SWITCH (POWER) PUSH SWITCH (POWER)	*
S3	S40-2099-05	PUSH SWITCH (POWER)	TE
D1 ,2 D3 D4 D5 ,6 D9 ,10	V11-4107-30 V11-5100-60 V11-0295-05 V11-5100-50 V11-0273-05	CZ-165 RB-151 W06B STV-4H 1S2076A	*
D11 -14 D15 ,16 1C1 ,2 1C3 Q1 -4	V11-2100-10 V11-0271-05 V30-0453-10 V30-0264-30 V03-1980-30	U05C(S) 1S2076 TA7322P HA1457w-04 2SC1980(S,T,U)	*
Q5 ,6 Q7 ,8 Q9 ,10 Q11 ,12 Q13 ,14	V01-0992-00 V03-0452-05 V01-0173-05 V04-0716-00 V02-0686-00	2SA992 2SC1735 2SA850 2SD716 2SB686	*
Q15 Q16 Q17	V01-0954-00 V01-0733-90 V03-0297-05	2SA954 2SA733(A) 2SC945	